



How to Use your GPS:



Power On:

Press and hold the power button. Wait until "Garmin" logo appears on the screen.

Power Off:

Press and hold the power button until screen is turned off.

The power button is the only button on the GPS unit. In order to use your GPS, you have to use the touch screen.

Install the batteries (2 AA batteries):



Lift the latch and remove the battery cover. Remove the old batteries and insert the new ones observing polarity. Replace the battery cover and secure the latch.

Save batteries by using the screen saver!

The screen saver is automatic and the screen will dim if the GPS unit is not touched for a period of time. A simple touch on the screen will reactive the GPS.



Select your itinerary for your hike on the touch screen:

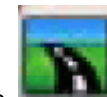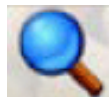

1. Select "where to" icon and then routes.

2. Select your itinerary by its name (press on the screen, use arrows up & down to scroll on the list if necessary).



3. Click on view map and then click "Go" in order to see the map. **Use + / - to zoom in / out.** For viewing, a zoom of 20 meters is recommended so the path to follow is easy to see.



4. Once GPS signal is acquired, your location is represented by the location marker (a blue triangle). *If the "?" symbol appears over the location marker the GPS signal is lost (wait until the signal returns or change locations if necessary).* Then, follow the path on the GPS.




5. **You can scroll across the map with your finger but you must click on the bottom left arrow if you want the GPS to display your position again.**



6. Push "X" if you want to go back to main menu.

Acquiring GPS satellite signals:

Travel to an open area away from tall buildings and trees and turn the GPS on. Acquiring satellite signals may take a few minutes.

The  bars on the main menu indicate satellite strength. When the bars are green, the GPS has acquired satellite signals.